

## Parental Control: Purchase Protection

### What is Purchase Protection?

- Purchase Protection allows you to prevent others from ordering Pay-Per-View or iControl Programs without your permission.
- You do this by setting up a Purchase PIN number that must be entered before any purchases are made.

### Setting up Purchase Protection

1. Press the **SETTINGS** button on your remote control to display the **Quick Settings** menu, and then press the **A** button to display the **General Settings** menu.
2. Press the **UP** or **DOWN** arrow buttons to find **Purchase PIN**.
3. If you have not yet set up Purchase Protection, you will see that the Purchase PIN is **Disabled**.
4. Press the **SELECT** button.
5. Press the **UP** or **DOWN** arrow buttons to choose **ENABLE** and press the **SELECT** button again.
6. Enter your 4-digit PIN number when prompted.

#### **Tip:**

If you have not set up a PIN Number for Purchase Protection, the default number is usually **0000**.

#### **Note:**

You have a separate PIN Number for Blocking Programs and Purchase Protection. Although the default for both may be **0000**, changing one does not change the other. You have to change each of them separately.

7. Press the **A** button to accept your choice. Your Purchase PIN is now enabled and all purchasing requires PIN entry.
8. Press the **EXIT** button to return to watching TV.

**Tip:**

- We recommend you change the PIN from the default **0000** to something unique that you can remember. For added security, it's a good idea to change your Purchase PIN on a regular basis.
- To learn about **Changing Your PIN Numbers**, read that tutorial.
- If you forget your PIN number, or if the default PIN is not **0000**, call customer service and they will help reset your PIN number.

### **Disabling Purchase PIN**

1. Press the **SETTINGS** button on your remote control to display the **Quick Settings** menu, and then press the **A** button to display the **General Settings** menu.
2. Press the **UP** or **DOWN** arrow buttons to find **Purchase PIN**.
3. Press the **SELECT** button.
4. Press the **UP** or **DOWN** arrow buttons to choose **ENABLE** and press the **SELECT** button again.
5. Enter your 4-digit PIN number when prompted.
6. Press the **A** button to accept your choice. Your Purchase PIN is now disabled and purchasing does not require PIN entry.
7. Press the **EXIT** button to return to watching TV.