

Program Guide: TV Search Shortcuts

In this tutorial we will show you some Power Tips for finding programs quickly. If you want to brush up on your basic channel browsing skills, review the **Channel Browsing** tutorial.

We will be covering:

- Browse by Time
- Browse by Theme
- Browse by Title

We will be doing all of these from the **Program Guide**, so first press the **GUIDE** button.

Whenever you find the program you want, press the **SELECT** button to tune to it immediately OR if you want to go back to your original program, press the **EXIT** button to clear the screen.

Browse by Time

Find Programs by Time of Day

When the **GUIDE** first comes up, you will automatically be browsing by **TIME**. If you ever want to return to this option while you're in the guide, press the **A** button.

Scrolling Through Channels

1. **Basic:** Press the **UP** or **DOWN** arrow buttons to browse channels one at a time.
2. **Faster:** To scroll faster, press the **PAGE +/-** button to jump one page at a time.
3. **Fastest:** Jump by blocks of 100 channels at a time by pressing the **A** button.

Scrolling Through Time Slots

1. **Basic:** Press the **LEFT** or **RIGHT** arrow buttons to browse by time slot.
2. **Faster:** Hold down the **RIGHT** arrow button. You will start by moving at normal speed. After a few moments, the channel grid will darken, and you will start moving ahead in **Power Speed** mode. If you go ahead several days, it can take a few moments to load the program information, so you may see the words **No Data** displayed temporarily.
3. To jump back to today's listings, press the **GUIDE** button twice.

Browse by Theme

Find Programs by Theme (Sports, Comedy, Drama, etc.)

1. Press the **B** button to browse by theme.
2. Categories are listed on the left side of the screen:
 - Main categories, like SPORTS, MOVIES and NEWS are listed in capital letters.
 - Subcategories, like basketball, baseball and football, are listed under each Category.

Choose a Theme

1. **Basic:** Press the **UP** or **DOWN** arrow buttons to scroll through themes one at a time.
2. **Faster:** Press the **PAGE +/-** button to jump a page at a time.
3. **Fastest:** Press the **B** button to jump a category at a time button.
4. Once you find a theme you want, press the **SELECT** button.
5. All available programs are now listed on the right side of the screen. The programs currently playing are listed first, with a small dot next to each of them.
6. To choose a different theme, press the **LEFT** arrow button.

Choose a Program

1. **Basic:** Press the **UP** or **DOWN** arrow buttons to scroll one at a time.
2. **Faster:** Press the **PAGE +/-** button to jump one page at a time.

Tip:

You can browse by **THEME** to find shows with closed captioning (CC) or a second language audio track like Spanish (SAP). Just use the **Page +/-** button to jump to these category listings.

Browse by Title***Find a Specific Show by Title***

Press the **C** button to browse by title.

Choose a Letter

1. Press the **UP** or **DOWN** arrow buttons to find the first letter of the show you want.
2. Press the **SELECT** button. An alphabetical list of all the shows that begin with your letter now appear on the right side of the screen. Currently playing shows are marked by a small dot.
3. To search another letter in the alphabet, press the **LEFT** arrow button.

Choose a Program

1. **Basic:** Use the **UP** and **DOWN** arrow buttons to scroll through shows one at a time.
2. **Faster:** Press the **Page +/-** button to jump a page at a time.