

# Digital Remote VCR Codes

You can program your remote to control your VCR's power, tape play, record, fast forward, rewind, stop and TV/VCR functions.

Make sure your VCR is powered ON before you program the remote control.

1. Move the VCR/VOD slide switch on the remote control to the "VCR" position.
2. Locate the proper VCR brand with correlating codes from the [VCR Setup Codes](#) list.
3. Point the remote control away from the digital home communications terminal and away from your TV and VCR.
4. Press and hold the **VCR** button and the **Select** button at the same time until the red LED on the remote blinks twice.
5. Using the remote control keypad, enter your VCR's 3 or 4 digit setup code. The red LED on the remote should blink twice. If not, try another setup code, if available.
6. Confirm by pointing the remote control toward the VCR and test the **Power**, **Play**, and **Stop** functions. If these functions do not operate properly from the remote control, enter the next VCR setup code in the list by repeating this procedure from Step 1.

**Note:** *If you want the remote control to adjust the volume on your digital home communications terminal rather than the volume on your TV, remember to press the **CBL** button before adjusting the volume, and if you want the remote control to adjust the volume on your TV press the **TV** button.*

## VCR Setup Codes

VCR Brand	Code
Admiral	062
Adventura	014
Aiko	292
Aiwa	014, 051, 321
Akai	055, 075
American High	049
Asha	254
Audiovox	051
Beaumarck	254
Bell & Howell	118
Brocksonic	016, 135, 198, 225
CCE	086, 292
Calix	051
Canon	049
Carver	095
Cineral	292
Citizen	051, 292

Colt	086
Craig	051, 061, 086, 254
Curtis Mathes	049, 055, 074, 176
Cybernax	254
Daewoo	034, 059, 292, 575
Denon	056
Dynatech	014
Electrohome	051
Electroponic	051
Emerex	046
Emerson	014, 016, 051, 057, 075, 135, 198, 222, 235, 292, 493, 575
Fisher	061, 068
Fuji	047, 049
Funai	014
GE	062, 049
Garrard	014
Go Video	446, 540
GoldStar	051, 052
Gradiente	014, 022
HI-Q	061
Harley Davidson	014
Harmon/Kardon	052, 095
Harwood	086
Headquarter	060
Hitachi	014, 055, 056
JVC	022, 081, 055
Jensen	055
KEC	051, 292
KLH	086
Kenwood	081, 052, 055
Kodak	049, 051
LXI	051
Lloyd's	014, 222
Logik	086
MEI	049
MGA	057, 075, 254
MGN Technology	254
MTC	014, 254
Magnasonic	292
Magnavox	014, 049, 053, 095, 163
Magnin	254
Marantz	049, 095

Marta	051
Matsushita	049, 176, 254
Memorex	060, 062, 014, 049, 051, 053, 061, 118, 176, 254, 321
Minolta	056
Mitsubishi	081, 062, 057, 075
Motorola	062, 049
Multitech	014, 086
NEC	081, 052, 055, 118
Nikko	051
Noblex	254
Olympus	049
Optimus	051, 062, 176, 046, 468, 118
Orion	016, 198, 493
Panasonic	049, 176, 239, 468
Penney	049, 051, 052, 056, 254
Pentax	056, 119
Philco	049, 223, 493
Philips	049, 095
Pilot	051
Pioneer	081
Portland	034
Profitronic	254
Proscan	074
Protec	086
Pulsar	053
Quarter	060
Quartz	060
Quasar	049, 176, 468
Radio Shack	014
Radix	051
Randex	051
RCA	062, 049, 056, 074, 163, 254
Realistic	060, 062, 014, 049, 051, 061, 118
Runco	053
STS	056
Samsung	059, 254
Sanky	062, 053
Sansui	018, 285, 493, 014, 055
Sanyo	060, 061, 118, 254
Scott	057, 059, 135, 198
Sears	060, 014, 049, 051, 056, 061, 118
Semp	059

Sharp	062
Shintom	086
Shogun	254
Singer	086
Sony	047, 014, 046, 049, 048
Sylvania	014, 049, 057, 095
Symphonic	014
TMK	222, 254
Tatung	055
Teac	014, 055
Technics	049, 176
Teknika	014, 049, 051
Thomas	014
Toshiba	057, 059
Totevision	051, 254
Unitech	254
Vector	059
Vector Research	052
Video Concepts	059, 075
Videosonic	254
Wards	062, 014, 049, 056, 061, 074, 086, 095, 166, 254
White Westinghouse	292
XR-1000	014, 049, 086
Yamaha	052
Zenith	047, 014, 053