

Intuitive Remote

The Intuitive remote is designed to operate all of the features of your advanced analog or digital cable box: your TV's power, volume control, and mute, and your VCR's power and playback features.

[Installing the Batteries](#)

[Setting Up the Intuitive to Operate Your Devices](#)

[Searching for Your Code](#)

[Getting Codes from the Intuitive](#)

[Volume Lock](#)

[Setting Up the MACRO Button](#)

[Buttons](#)

[Troubleshooting](#)

Installing the Batteries

The Intuitive remote requires two new AA alkaline batteries.

To install the batteries:

1. On the back of the Intuitive, pull back on the tab and lift off the battery cover.
2. Match the + and - marks on the batteries to the ones in the battery compartment of the remote.
3. Press the battery cover back into place.
4. Test the remote control by pressing the **TV** button. If the batteries are installed correctly, the red light on the remote will blink once.

[Back to Top](#)

Setting Up Your Intuitive to Operate Your Devices

To setup your Intuitive to operate your devices:

1. Turn on the device (TV, VCR, cable, etc.) that you want to operate.
2. Press and hold the **SETUP** button until the Intuitive's red light blinks twice. Release the **SETUP** button.
3. Enter the first 3-digit Setup Code for your brand of device. If you entered the code correctly, the Intuitive's red light will blink twice.
4. Aim the Intuitive at your device and hit the device button.
5. Your device should turn off. If your device does not turn off, repeat steps 1 - 3 trying each code for you brand of device until you find the code that operates your device.

Note: Many VCRs, and CD players do not have the POWER function on their original remote. When you are testing a code for these devices, have the device on and a tape or disc in the device. Test the device by hitting the **PLAY** button, and see if the device plays the tape or disc.

[Back to Top](#)

Searching for Your Code

To search for your code:

1. Turn on your device.
2. Press and hold the **SETUP** button until the Intuitive's red light blinks twice. Release the **SETUP** button.
3. Press the following buttons: **9**, **9**, and **1**. The Intuitive's red light will blink twice.
4. Aim the Intuitive at your device and slowly alternate between pressing the **DEVICE** and **CURSOR UP (^)** buttons until your device goes off. You may have to press this sequence of buttons up to 100 times to search the entire library of codes.
5. Once your device goes off. Press and release the **SETUP** button to lock in your code. Your Intuitive is ready to operate your device.

[Back to Top](#)

Getting Codes from Your Intuitive

To find out which three-digit code is operating your television after your television is set up, use this procedure:

1. Press and hold the **SETUP** button until the Intuitive's red light blinks twice, then release the **SETUP** button.
2. Press the following buttons: **9**, **9**, and **0**. The Intuitive's red light will blink twice.
3. For the first digit of your three digit code, press the **1** button, wait and count the number of times the Intuitive's red light blinks. If the light does not blink when you press the **1** button, the digit is zero.
4. For the second digit of your three digit code, press the **2** button, wait and count the number of times the Intuitive's red light blinks. If the light does not blink when you press the **2** button, the digit is zero.
5. For the third digit of your three digit code, press the **3** button, wait and count the number of times the Intuitive's red light blinks. If the light does not blink when you press the **3** button, the digit is zero.
6. Now you have the 3-digit code for your television.

[Back to Top](#)

Volume Lock

If your television is not remote-controllable or if you have a TV/VCR combination, you can access the volume of your cable converter. To change the volume setting on the Intuitive:

1. Press and hold the **SETUP** button until Intuitive's red light blinks twice, then release the **SETUP** button.
2. Press the following buttons: **9**, **9**, and **3**. The Intuitive's red light will blink twice.
3. Press and release the **CBL** button. The Intuitive's red light will blink twice.
4. Now, whenever you press the **VOL UP/DWN** buttons on the Intuitive, your volume will be controlled by your cable converter.

To return the volume to the TV:

1. Press and hold the **SETUP** button until Intuitive's red light blinks twice, then release the **SETUP** button.
2. Press the following buttons: **9, 9,** and **3**. The Intuitive's red light will blink twice.
3. Press and release the **TV** button. The Intuitive's red light will blink twice.
4. Now, whenever you press the **VOL UP/DWN** buttons on Intuitive, your volume will be controlled by your television.

[Back to Top](#)

Setting Up the **MACRO** button

The Intuitive has one **MACRO** button that allows the user to play back a series of button strokes (button sequence) at any time with the press of one button. For example, to set up a sequence that will turn on your TV, VCR, or cable converter:

1. Press and hold the **SETUP** button until the remote's red light blinks once and then quickly twice. Release the **SETUP** button.
2. Press the following buttons: **9, 9,** and **5**. The red light will blink twice.
3. Press and release the **MACRO** button.
4. Press the **CBL** button, then **TV** button, and then the **VCR** button.
5. Press and hold the **SETUP** button, until the red light blinks twice.
6. Now, whenever you press the **MACRO** button, the Intuitive remote will turn your cable, TV, and VCR on. If your equipment is already on, then pressing the **MACRO** button will turn your equipment off.

To program the **MACRO** button with your three favorite channels:

1. Press and hold the **SETUP** button until the remote blinks twice. Release the **SETUP** button.
2. Press the following buttons: **9, 9,** and **5**. The remote will blink twice.
3. Press and release the **MACRO** button.
4. Now, using the DIGIT buttons (0 - 9), enter the channel number for one of the favorite channels you wish to program.
Note: If you are entering a single digit channel number, you may have to enter a "0" first. If your cable converter requires you to press an **ENTER** button after entering a channel number, then include the **ENTER** button stroke in this sequence.
5. Press and hold the **SETUP** button until the remote blinks twice. Release the **SETUP** button. The **MACRO** button is now programmed to your first favorite channel. Remember that you can program up to three channels on the **MACRO** button.
6. To program additional channels to the **MACRO** button, repeat steps 1 - 5.

To clear the **MACRO** button of any sequences programmed in the memory of the Intuitive remote:

1. Press and hold the **SETUP** button until the Intuitive remote's red light blinks twice. Release the **SETUP** button.
2. Press the following buttons: **9, 9,** and **5**. The Intuitive will blink twice.
3. Press and release the **MACRO** button.

- Press and hold the **SETUP** button until the light on the remote blinks twice. Release the **SETUP** button.

[Back to Top](#)

Buttons

The table below lists the buttons and their functions.

Button	Function
SETUP	Used to program the Intuitive.
TV, VCR and CBL	Used to POWER on your TV, VCR and cable converter respectively.
VOL UP/DWN and MUTE	Used to control the volume of your TV or cable converter.
CH UP/DWN	Used to change the channels on your cable converter. (The number buttons 0 - 9 are used for directly accessing the channels on your cable converter.)
PLAY, REW(rewind),FF(fast forward), STOP, PAUSE, RECORD, AND TV/VCR	Used to control the functions of your VCR. As a safety feature of your Intuitive remote, you must press the RECORD button twice.
LAST	Returns you to the previously viewed channel on your cable converter.
FAV	Accesses the favorite channels stored into your cable converter. For instructions on setting up a Favorite Channel table, please refer to your cable converter manual.
MACRO	Can memorize up to 15 button strokes that can be accessed in sequence by pressing the MACRO button.

CABLE INTERACTIVE

Control the functions of your cable converter and will vary depending on the manufacturer of your cable converter. Please refer to your cable converter manual for button descriptions.

[Back to Top](#)

Troubleshooting

The table below lists some common problems and the solutions to them.

Problem	Solution
Red light not blinking when you press a button.	Replace the batteries with 4 new "AAA" batteries.
The Intuitive does not operate your television.	Try all of the codes for your brand of television. Make sure the television you are trying to operate can be worked with an infrared remote control.
The red light blinks when you press a button, but you receive no response from cable converter or television.	Make sure you are aiming your the Intuitive at your television or cable converter and that you are within 15 feet before using your remote.

[Back to Top](#)