

Using the Digital Video Recorder

Digital video recording (DVR) gives you new control over your TV viewing. You can set it to automatically record your favorite shows, including high definition shows, and watch them on your schedule. You can even pause and replay live TV.

You can record two shows at the same time. You can watch one of them while it is being recorded, or you can watch a show you already recorded while Moxi records two others.

Pause and Instant Replay

Pause live TV by pressing pause on the remote. Press replay to play back the last few seconds of your live or recorded show



Record A Show

To record a show you're watching now, press the rec button. Then choose record once. If you're watching a series episode, choose record once to record the current episode, or record series to record this episode plus upcoming ones.



To schedule a recording, select a show in the menu, and then press OK or rec. Choose record once or record series. If the network changes the broadcast time, Moxi updates the recording schedule automatically.

On Demand or Pay-Per-View

On Demand shows are available for a limited time. You can watch an On Demand show as often as you'd like during the time it's available. Some On Demand titles are provided at no charge, others may be part of an all-you-can-watch subscription, and some are marked with a rental fee. On Demand titles can not be recorded on your DVR.



The Pay Per View category provides access to scheduled premium shows and events. Purchase a title to watch or record, and then watch it at your leisure. Pay Per View titles also appear in other categories, such as Movies or Sports.

Other Great Moxi Features

Moxi Ticker

Ticker lets you monitor the latest weather, sports, stocks, and news headlines while watching your show.



To display or hide Ticker, press the ticker button on your remote. Ticker automatically cycles through each category, or you can use the arrow buttons to navigate.

High Definition

Moxi brings you all available high-definition (HD) channels* and lets you record in HD, so your recordings are every bit as breathtaking as the originals. If you haven't purchased an HD-ready TV yet, you can still enjoy and record HD programs on your current set, but in standard definition.



* HD service not available in all areas. Subscription required on some HD services.

Additional Features

Some of these features may not be available in your area or may be coming soon.



If available, you can choose such features as Games and Photos. Moxi lets you try your hand at strategy and casino games that you can play by yourself or with a friend by sharing the remote.

Photos lets you upload your digital photos and play them on your TV. You must use a ScanDisk ImageMate® 8 in 1 USB 2.0 Card Reader/Writer to upload your photos.



User Guide


Moxi DVR/HDTV

CABLE

HIGH-SPEED ONLINE

DIGITAL PHONE

Using the DVR Remote Control

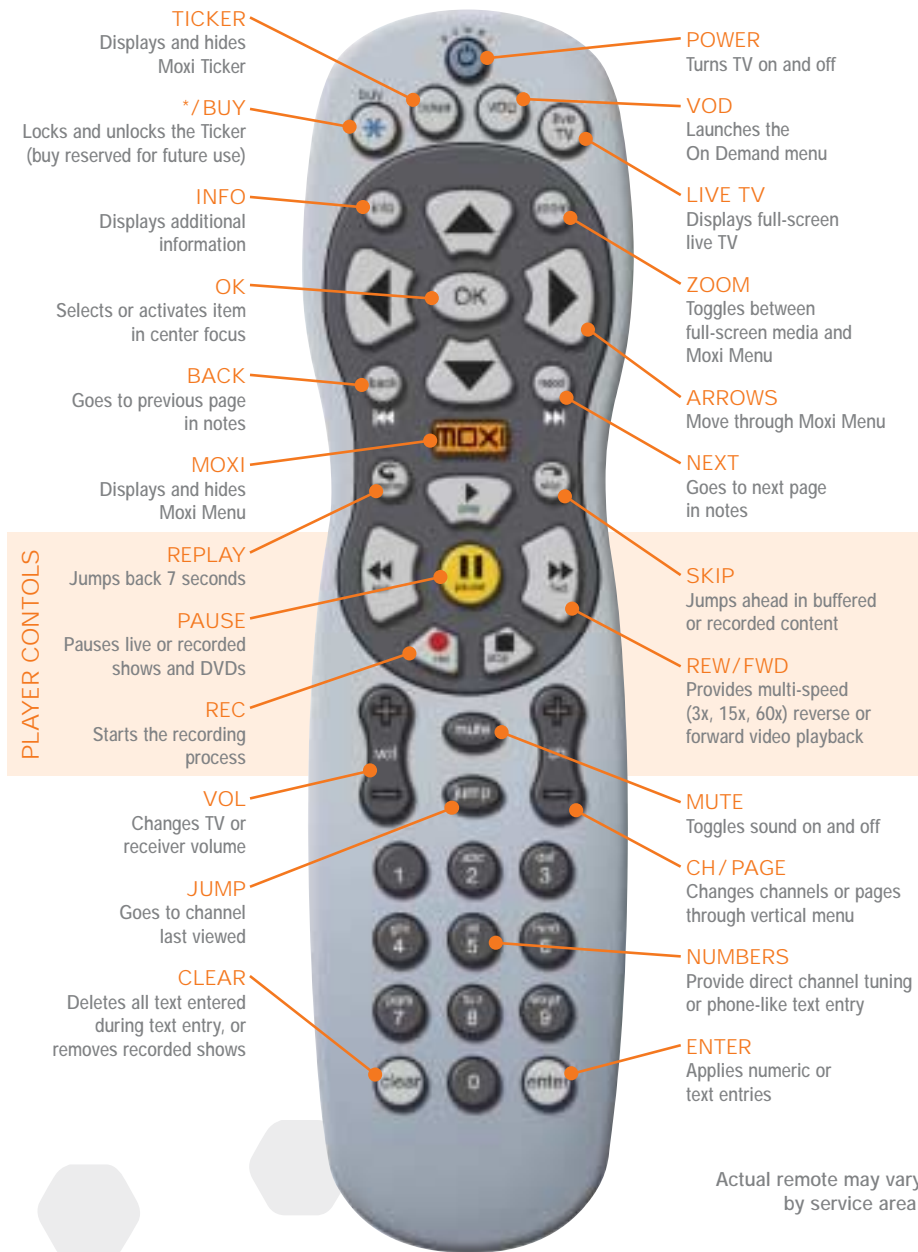

Actual remote may vary by service area.

Getting Started


Intro Movie

Intro to Moxi Menu is a short movie about using your new Time Warner Cable DVR with Moxi. Seeing the main features in action is an easy way to get familiar with them. The intro movie is always available on the Moxi Menu to show to friends and family members.




Navigating Moxi

The Moxi Menu makes it easy to find shows and other great entertainment options. Use the Moxi remote for effortless navigation.

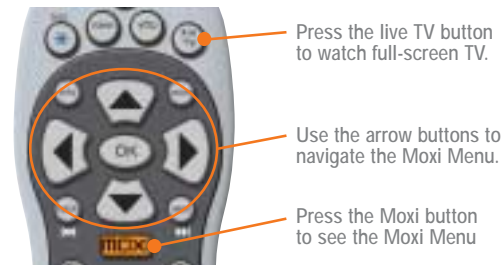

Moxi Menu

The vertical and horizontal menus loop around so you never get lost. The horizontal menu holds the main categories, and the vertical menu contains all the choices for that category.

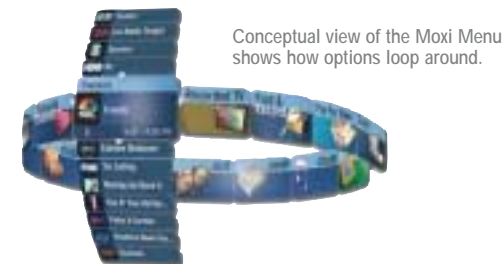

Conceptual view of the Moxi Menu shows how options loop around.

We're here to assist you, 24 hours a day, 7 days a week.

Customer Care
1-888-TW-CABLE

On the Web
www.TimeWarnerCable.com/SoCal

 
Finding A Show

Whether you're browsing to see what's on or looking for a particular show, you can choose it from the Moxi Menu or "punch in" the channel numbers, just as you always have.

See What's On

To see what's on now, press the UP or DOWN arrows to scroll through the channel list. When you find one you want, press OK, and then choose watch.

Use the RIGHT arrow to enter the On Next menu, and the UP and DOWN arrows to browse future show listings. Select a show, and then press OK to schedule a recording. To exit, press the LEFT or RIGHT arrows.

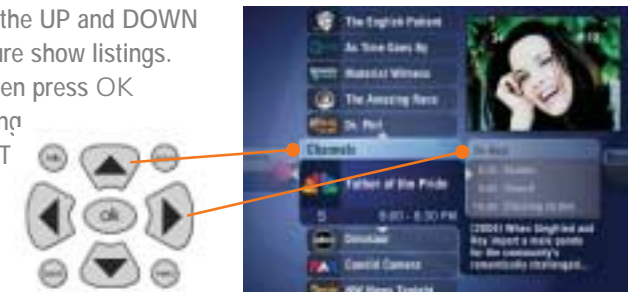

Four Ways To Search

For quick browsing, the Moxi Menu has shows grouped by category, such as Movies, Sports, Kids, News, and Music. You'll even find a category for high-definition shows.

The Find & Record category provides additional search methods. If you know the name of a show, you can search by Title. Use the Keyword search to find a show by the name of a cast or crew member or a descriptive word. The Category search offers additional search possibilities. Use the keypad on the remote or the on-screen keyboard to enter the information.

