




DVR QUICK TIP CARD

Easy Steps to Use the Features of Your DVR






How Do I Record a Program?

You can set a recording with just one touch of the remote.

- » While in the **Guide** , highlight the program you wish to record and press **Record** . A red dot appears in the **Program Information** window to indicate the program will be recorded.
- » While watching live TV, simply press **Record** . A **Recording Started** notice appears to indicate recording has begun.



How Do I Record a Series?

1. Highlight the TV series you want to record in the **Guide** and press **Record**  twice to view the **Overlay** screen.
2. Select the **Create a Series Recording**  icon and specify your recording options, such as the type of episode you want to record and how many episodes you want to save.
3. Select **Record**  to record the series with these options.



How Do I Watch a Recording?

Press **My DVR**  to view a list of your recorded programs. Highlight a program and press **OK/Select** . Select the **Play**  icon.



How Do I View a List of Programs Scheduled to Record?

1. Select **DVR**  from the **Quick Menu**.
2. Select **DVR Schedule**.
3. Select **Scheduled Recordings**.

Easy Steps to Use the Features of Your DVR


How Do I Pause, Rewind, and Instantly Replay Live TV?


Press **Pause** , **Rewind** , or **Instant Replay**  on the remote.

How Do I Play in Slow-Motion?


Press **Pause** , then press **Fast-Forward**  to view slow-motion in forward mode. Or press **Pause** , then **Rewind**  to view slow-motion in reverse mode.

How Do I Return to Live TV?

Press **Live**  on your remote.

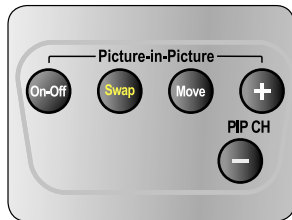

How Do I Change Channels when I am Watching a Show that I am Recording?




When you get a message saying that changing the channel will stop this recording, press the **Swap**  button to change tuners. You may now watch another program without interrupting your recording. All other Picture-in-Picture buttons are reserved for future use.

How Do I Start a Recording Early or Extend the End Time?

1. Select a program from your list of **Scheduled Recordings**.
2. Select the **Recording Options**  icon.
3. Arrow down to adjust the start and end times.



How Do I Modify My Series Priority List?

1. Select **DVR**  from the **Quick Menu**.
2. Choose **DVR Schedule**.
3. Select **Series Priority List**.
4. Highlight a listing and use **Page+/-**   to modify the priorities.

Important Notes About Your DVR

- >> DVR is set to save programs until "Space is Needed." You can change the delete priority to "I Delete" for all programs or for individual programs.
- >> You can easily determine how much disk space is available by accessing DVR Recordings. The blue bar indicates how much disk space is occupied.
- >> Parental Locks will not prevent a program from recording. However, the audio is muted and no video appears while it records.
- >> You cannot record ON DEMAND programs.
- >> You can record music channels. However, the playback controls are not functional for recorded music.

For more information, visit timewarnercable.com.

Guideworks Dual Tuner DVR
0405